




ZIVA 2.0

Instruction Manual

Specification:


Fit For: 1G & 2G Cartridges
 Size: 36.1*21.1*111mm
 Resistance: >0.8Ω
 Color TFT Display Size: 1.26inch
 Voltage Range: 1.8V-4.2V
 Safety Cut-off: 15 Seconds
 Battery Capacity: 650mAh
 Charging Type: 5V/1A Type-C
 Charging Time: 1.0h

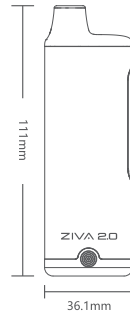

Package Content:

1x Ziva 2.0 (Cartridge Not Included)

How To Use:

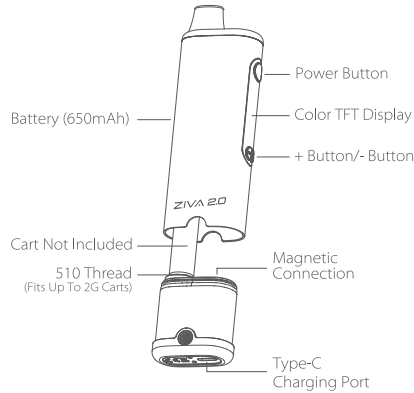

www.yocan.com

Original and Exclusive Manufacturer:
Shenzhen Yocan Technology Co.,Ltd



1. Turn ON/OFF: Quickly click the power button 5 times within 2 seconds.
 2. Cart Installation: Pull out the connection base, attach your 510 cart to the connection base and put the connection base on.
 3. 1.8V 10 Sec Preheat: Quickly click the power button 2 times.
 4. Adjust The Voltage: Click +/- button.
 5. Reset Puff Counter: Click -and power button at the same time.
 6. Vape: Draw-Activated, Auto Mode & Manual Mode.
 - 1) Draw-Activated: Simply inhale and exhale (9 seconds safety cut-off).
 - 2) Auto-Mode: Press and hold the + and - buttons simultaneously for 1 second (15 seconds safety cut-off).
 - 3) Manual Mode: Press and hold the power button (15 seconds safety cut-off).
 8. Charging: Type-C port. Fast charging not supported. Charging time around 1.0 hour, the screen displays "100" when fully charged and automatically turns off after 5 minutes.
- Notice: Auto shut down after 1.0 Hour.

	Power On.
	Power OFF.
	Preheat.

	Draw-Activated.
	Auto-Mode.
	Manual Mode.
	Safety Cut-off.
	Reset Puff Counter.
	Please Charge The Device.
	No Atomizer.
	Short Circuit.
	Charging.

Caution:

Keep the device away from any environment involving strong acids, alkaline, combustible materials, water, or any other liquids.
 Do not keep in hot cars or store above the room temperature of 74°F.
 Do not use damaged batteries. If the battery casing is damaged,discontinue use and safely recycle the battery.
 Do not use the battery if contacts become exposed to solid or liquid matter.
 Shorts can result in fire or an explosion of a battery.
 Do not touch coils when hot. Severe burns can result.
 Do not touch hot material. Severe burns can result.
 If the device gets too hot in use, please stop using it for a while.
 Not intended for tobacco or nicotine use.
 Not an ENDS device.

Disclaimers:

People under 21 years of age are not permitted to purchase or use this device. Non-smokers, children, and women breastfeeding should not use this product. The device is not a medical device and is not intended to diagnose, cure or prevent any diseases or other conditions. The manufacturers and sellers will not be responsible for any consequential or incidental damage resulting from the sale or use of any merchandise.